
GEN/SQUARE
BUILT-IN
QUICK
GUIDE BOOK






# Gen Description Check all the parts with the following parts list

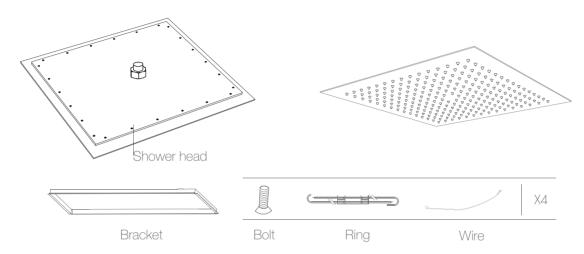

## Dimension

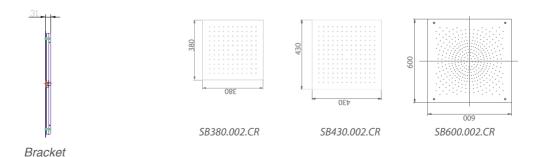


# Gen&Square built-in


• Code	SB380.002.CR S	B430.002.CR	SB600.002.CR
• Size	380X380mm 4	130X430mm	600X600mm
• Finish	Cr painting		
• Orgin	JoeyforLife/Korea		

## Flow Rate

water pressure	350size	400size	
1 bar	17.4	17.5	
2 bar	22.5	22.9	
3 bar	27	28.6	

<sup>\*</sup> Direct Connection Without tap

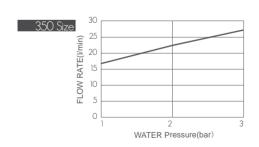


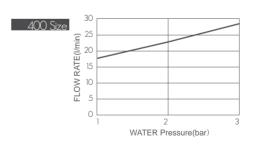

### GEN/SQUARE BUILT-IN QUICK GUIDE BOOK


#### Installation

#### STEP1 Bracket

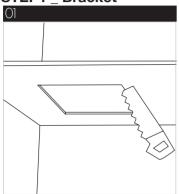

Cut the ceiling to install bracket.

-SB380.002.CR: 354 -SB430.002.CR: 404 -SB600.002.CR: 570

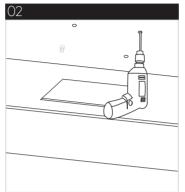


Drill the upper ceiling Ø12 for an

chor bolts


-SB380: 4holes for square(310X

256mm)


-SB430: 360X305mm -SB600: 470X468mm

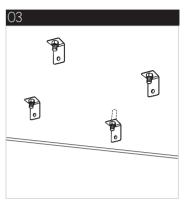


Insert the anchor bolts

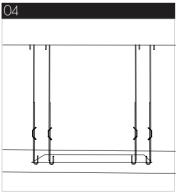

Connect rings to the bolts

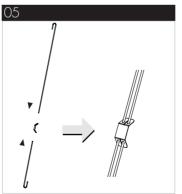

Adjust the lengths of rings

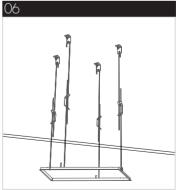


Hang the bracket to the rings

### Installation2


#### STEP2 Head Shower



Connect water supply hose to the shower head

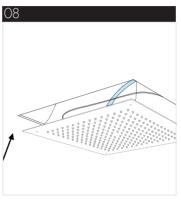

Push the shower head to the bracket

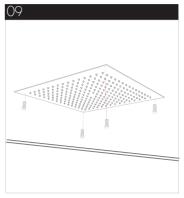

Fix the shower head with bolt

#### **Cautions**

- -Avoid too much force for operation.
- -Keep the hand hold shower on the shower arm.
- -The recommended water pressure is over 2kg<sup>2</sup>/cm<sup>2</sup>
- -Clean the products with right materials
- -Do not dismantle the products without manual